



LYL SPRING PTY LTD
T/A Ranger RV Supplies
8 Connection Drive
CAMPBELLFIELD VIC 3061
P: 03 93576440
E: sales@rangersupplies.com.au
A.B.N. 73 160 378 905

Skylight Installation Instructions and Guidelines

Model # RVSL

Thank you for choosing to use Ranger RV Supplies RVSL skylight for your build. Below you will find a list of instructions and guidelines which you must follow to ensure the longevity of the product.

- 1) We recommend adding 4mm to the cut out dimensions (eg: 700 x 500 roof cut out dimensions should be 704 x 504 mm).
- 2) Apply silicon to the skylight external frame/base. We recommend using Bostik industrial grade silicone or similar. Place the external frame into the cut out on the roof, use the supplied black L shape brackets to secure the external frame into place and **gently** screw. It is vital that you do not over tighten the screws as this can cause pressure on the frame and result in a crack.
- 3) Remove the LED strip light covers on the internal frame. Connect the 12 volt wire on the internal frame to the caravan/RV. Line up the screw holes on the internal frame to the holes on the L brackets. Gently screw the internal frame to the bracket and place the LED strip light covers back into place. Again it is vital you do not overtighten these screws as the blind will not function as it should.
- 4) Clean the skylight with a damp microfiber cloth with water. No chemicals should be used to clean the skylight.
- 5) Provide a copy of our warranty policy and user guide during caravan/rv hand over to ensure customer understands how to operate the skylight.

Thank you for your cooperation.
Ranger RV Supplies