



LYL SPRING PTY LTD
T/A Ranger RV Supplies
8 Connection Drive
CAMPBELLFIELD VIC 3061
P: 03 93576440
E: sales@rangersupplies.com.au
A.B.N. 73 160 378 905

Window Installation Instructions and Guidelines

Model # RFW

Thank you for choosing to use Ranger RV Supplies classic RFW windows for your build. Below you will find a list of instructions and guidelines which you must follow to ensure the longevity of the product.

- 1) We recommend adding 4mm to the cut out dimensions (eg: 1000 x 800 window cut out dimensions should be 1004 x 804 mm).
- 2) Remove the black rubber on the inside edge of the external black frame.
- 3) Apply silicon around the inside of the external frame. We recommend using Bostik industrial grade silicone or similar. Place the external frame onto the external wall, use the supplied brackets and hex nuts to secure the external frame into place and **gently** screw the hex nuts. It is vital that you do not over tighten the hex nuts as this can cause pressure on the frame and result in a crack.
- 4) Line up the internal frame with the hex nuts. Ensure the block out blind is positioned at the bottom of the window and the flyscreen is at the top. Gently screw the internal frame to the hex nuts with the supplied screws. Again it is vital you do not overtighten these screws as the blind will not function as it should.
- 5) Cover the screw holes with the supplied rubber covers.
- 6) Remove the clear protection film on the acrylic window blade and clean the windows with a damp microfiber cloth with water. No chemicals should be used to clean the windows.
- 7) Provide a copy of our warranty policy and user guide during caravan/rv hand over to ensure customer understands how to operate the window.

Thank you for your cooperation.
Ranger RV Supplies